

# DELUXE DECK BAG

## INSTRUCTIONS



### USING YOUR DELUXE DECK BAG

\*Before first using your Deluxe Deck Bag for the first time you will need to insert the reinforcing board into the bag.


**STEP 1**  
End tabs will face forward. Insert the side tabs of the left piece into the top of the slots on the right piece. See "Step 1" diagram at right.

**STEP 2**  
Bend the board in an arch shape, making sure the end tabs are facing front.


**STEP 3**  
Insert the bent board into the opening of the bag and release. Adjust the board into place so the arch supports the top of the bag.

**STEP 4**  
Attach the Deluxe Deck Bag onto your kayak or SUP and enjoy.

STEP 1

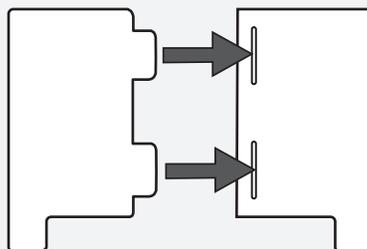

STEP 2

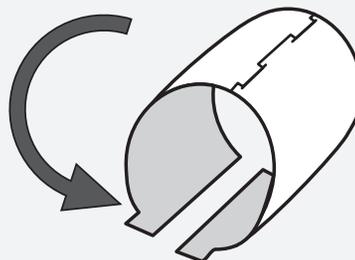

STEP 3



### WARNING

Due to the fact that Seattle Sports does not have control over how this device is used, Seattle Sports disclaims any and all liability for damage or injury that might occur as a result of the improper use of this product.

### WARRANTY

Seattle Sports products are guaranteed for materials and workmanship for one year. Normal wear and tear or damage from misuse, accident, or alterations are not covered. Use of this product in a professional setting is not covered. Seattle Sports assume no liability for incidental damages or injuries resulting from the use or misuse of this product. You may have additional warranties or limitations outlined in product packaging. Thank you for purchasing our products. Please contact us with any questions or concerns about our products. Seattle Sports Company, 3217 W. Smith St #1, Seattle WA 98199. [seattle.sports.co.com](http://seattle.sports.co.com)

Copyright 2012