

Night Quest™

OPERATING INSTRUCTIONS

Before using you must install your battery. Detach the top half of the compass from the bottom half by carefully turning the top half one quarter turn **counter-clockwise** (see Figure 1). As you turn, the top will feel unsecure and ready to pull apart.

NOTE: When putting the compass back together, make sure the words "Push On/Off" line up with the Seattle Sports triangle On switch. Ensure the seal lies between the two halves and is not in danger of being pinched or folded (which would limit the waterproof qualities of your compass).

THE BATTERY

The battery sits in its own cradle, located on the circuit board (see Figure 2). Match the positive side to the positive markings on the circuit board and push firmly into place. It should sit snug.

Replacement batteries: CR 2045.

SUCTION CUP/BUNGEE PERFORMANCE

Suction Cup

- The suction cup will not work on all surfaces.
- Rough plastic does not allow suction cup to seal adequately.
- In all circumstances, one or both of the attached shock cord bungee lanyards should be hooked to a deck line or eyelet to ensure your compass is not lost if the suction releases.


Shock Cord Bungee Lanyards

- The shock cords have been sized for a **MAXIMUM** distance of 14 inches **BETWEEN** the two hooks.
- Do not overstretch them! The joint between the bungees and hook can break if too much tension is applied.
- If additional distance is needed, we recommend looping a thick rubber band around your deck attachment point and then hooking the bungee lanyard to the rubber band.

USE

Place the compass on any smooth surface of your deck. As you prepare to launch, push the Seattle Sports triangle On/Off button once to turn on the light sensor. As natural light fades, the red LEDs will illuminate your compass for safe navigation.

When you are finished, make sure to turn off the light sensor (saving your battery life). If you want to test the compass to make sure it's off, cup the top of the compass with your hands or take it into a dark room.

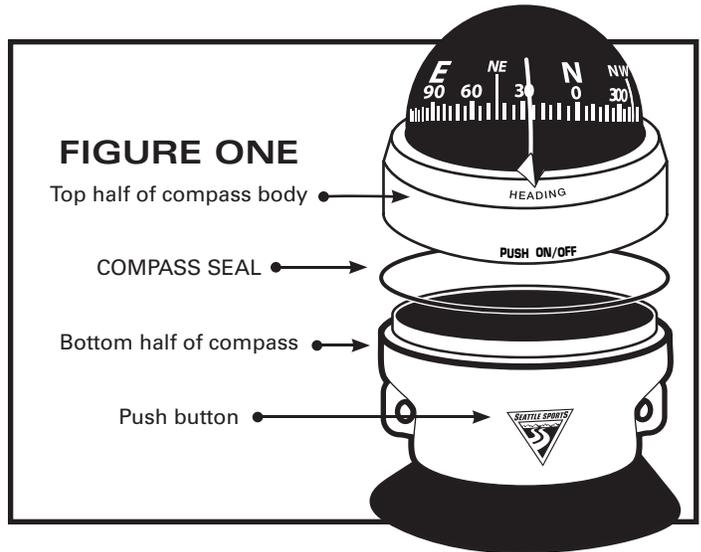

NOTE: The Seattle Sports triangle On/Off switch also lights up for added visibility and ease of turning on and off.

GUARANTEE

Seattle Sports products are guaranteed for materials and workmanship for one year. This warranty is only applicable if all instructions are followed and product is used as recommended.

Normal wear and tear or damage resulting from misuse, accidents or alterations are not covered. Use of this product in a professional setting is not covered. Seattle Sports assumes no liability for incidental damages or injury resulting from use or misuse of this product. You may have additional warranties or limitations outlined in product packaging.

Thank you for purchasing our products. Please contact us with any questions or concerns. Seattle Sports Company, 3217 W. Smith St #1, Seattle WA 98199 seattlesportsco.com

