




Deluxe Boat Cart Owner's Instructions

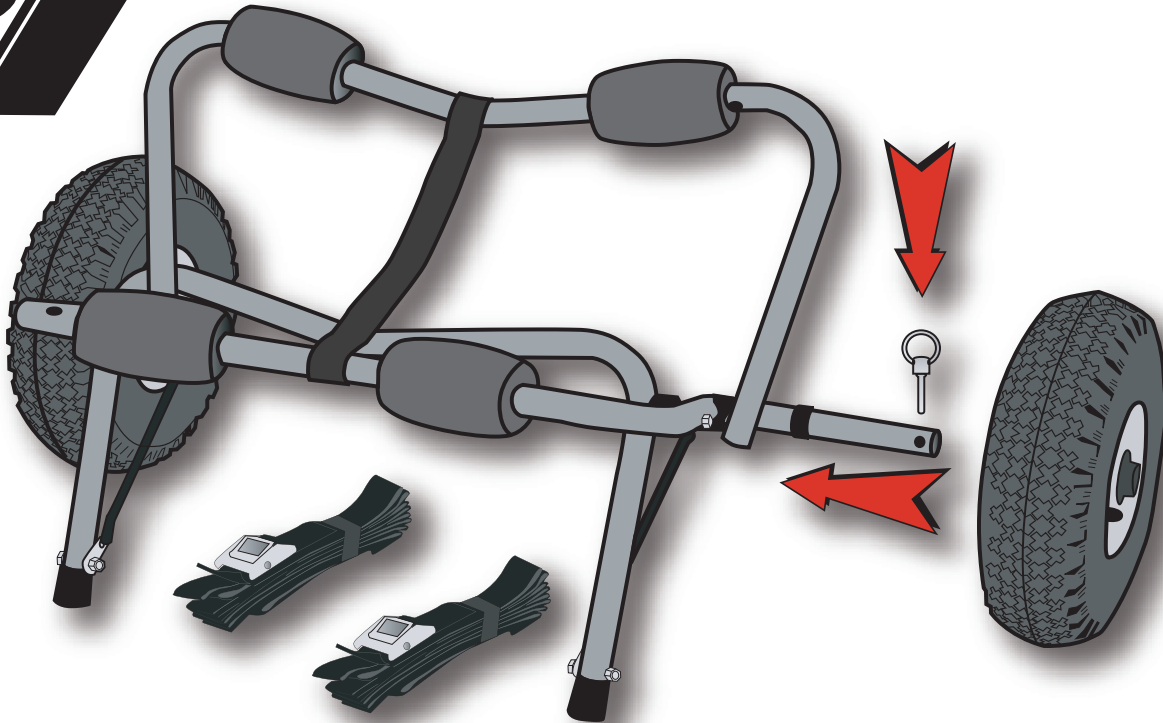

ASSEMBLY

1. Your frame should already be assembled for you.
2. Slip on the wheels with the valve stem facing out.
3. Insert the cotter pin into the hole on the end of the wheel axle. Then, flip the O-ring over the end of the axle to lock the wheel on the axle.

USE

1. Unfold the cart frame.
2. Place under the center of your kayak or canoe.
3. Use the provided straps to secure the boat to the cart.
4. Once at the water, you can take off the wheels and fold the frame for storage in the boat.



CARE

1. The tires should be inflated to approx 30 p.s.i.
CAUTION: INFLATE WHEELS WITH MANUAL PUMP ONLY. OVER-INFLATION OF WHEELS CAN RESULT IN SEVERE INJURY.
2. If the cart is used in or around salt water, rinse it off to prevent corrosion.
3. Do not overtighten the straps when connecting the boat to the cart. This can lead to damage to your boat.

Warning

Due to the fact that Seattle Sports does not have control over how this boat cart is used or how it is attached to a boat, Seattle Sports disclaims any and all liability for damage or injury that might occur as a result of improper use of this product.

Warranty

Seattle Sports Company warranties all new boat carts to be free of any defects in material or workmanship, (when used under normal conditions by the original purchaser) for a period one year from the date of purchase.

Seattle Sports Co.
3217 W. Smith
Seattle, WA 98199
1(800) 632-6163
seattlesportsco.com