




WIDE RIDER

ASSEMBLY INSTRUCTIONS

el assembly
ctions

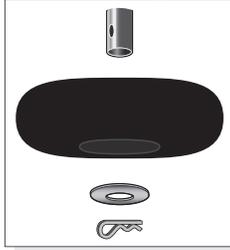

Foam pads are provided for hull protection. Put them on crossbars as shown below. Use soapy water or ArmorAll (do not use oil) on inside of foam to help it slide easily.

Slide crossbars into wheel assemblies until snap buttons "pop" into holes. (To disassemble push in snap buttons.)

Lower kickstand into place. Kickstand will keep the cart upright while you set the boat on the cart. It is designed to swing out of the way of obstacles.

3. Take strap over the top of the boat to the other side.
4. Pass the strap around the opposite leg of cart and back up over the boat.
5. Run the strap through the cam buckle and cinch tightly. Often one strap is enough; use two if portaging rough terrain.
6. When you arrive at your destination simply remove the strap, lift boat off cart, disassemble and stow cart.

USING A CENTER CART

1. Set the cart next to the boat. Pick up one end of the boat and place the boat on the cart, near the center of boat. Experiment with your boat to find the best spot to place the cart.
2. Pass a "cam buckle" strap (not included) around one leg of the cart. Do NOT use bungee cords.

The wheels should be on the outside of the frame. Notice that the wheels are centered inward. This distributes heavy loads and reduces "drag" when pulling the boat.



Folds for Storage

CAUTION

- Never tow Paddleboy® with any vehicle.
- Do not carry passengers in the craft while portaging.
- Damage to the craft or Paddleboy®, or injury may result from the improper or unintended use of Paddleboy®.

WARNING

Portaging a canoe, kayak or other craft is a strenuous activity. Prior to engaging in any strenuous activity (including that involving Paddleboy®) the user should consult a medical professional to determine whether the physical strain is appropriate.

By purchasing this Paddleboy® product the purchaser agrees for himself/herself and for any/all other users to release and waive all claims against Paddleboy® for damages or injury which may result from the use of this Paddleboy® product.

WARRANTY

Seattle Sports will repair or replace, at its discretion, any broken or defective parts for one year from date of purchase. The customer will be responsible for the cost of shipping the Paddleboy® back to the factory. Seattle Sports will pay all return shipping costs to customer. The customer takes responsibility for the proper attachment and use of the Paddleboy®. Seattle Sports cannot be responsible for any damage to any property arising out of the use or misuse of its product. **Call first for return authorization:** 800 632 6163. Return to Seattle Sports Co. 1300 N. Mariposa Ranch Rd., Nogales, AZ. 85621
seattlesportsco.com

OTHER SEATTLE SPORTS PRODUCTS



SeaRover
Deck Compass



SUB Submersible
Utility Beam™



Deluxe 16" No-Skid
Kayak Kit