


# NEMO ASSEMBLY INSTRUCTIONS

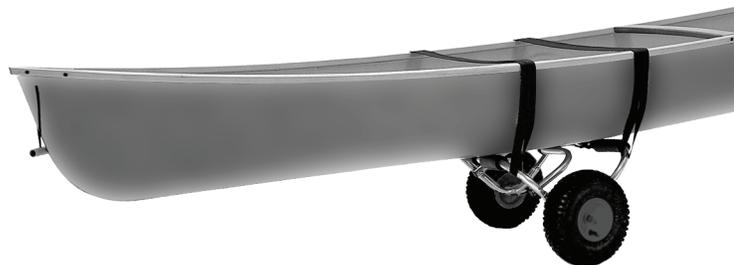

Foam pads have been placed on two crossbars to protect the hull of your boat. The third crossbar has no foam; it is called the kickbar.

Slide crossbar ends into ends of wheel assemblies. Snap buttons will “pop” out of the retaining holes when crossbars are properly seated. When both crossbars are firmly in wheel assemblies, pull kickbar downward. Kickbar tension can be adjusted by tightening lock nuts on either end.

The kickbar will keep the cart upright while you set the boat on the cart. It is designed to swing out of the way of obstacles.

## USING A CENTER CART

Set the cart next to the boat. Pick up one end of the boat and place the boat on the cart near the center of boat. Experiment with your boat to find the best spot to place the cart.

Pass a “cam buckle” strap (not included) around one leg of the cart. Do NOT use bungee cords.

Take strap over the top of the boat to the other side.

Pass the strap around the opposite leg of cart and back up over the boat.

Run the strap through the cam buckle and cinch tightly. Often one strap is enough; use two if portaging over rough terrain.

When you arrive at your destination simply remove the strap, lift boat off cart, disassemble and stow cart.

## CAUTION

- Never tow Paddleboy® with any vehicle.
- Do not carry passengers in the craft while portaging.
- Damage to the craft or boat cart, or injury may result from improper use.

## WARNING

Portaging a canoe, kayak or other craft is a strenuous activity. Prior to engaging in any strenuous activity (including that involving Paddleboy®), the user should consult a medical professional to determine whether physical strain is appropriate.

**By purchasing this Paddleboy® product the purchaser agrees for himself/herself and for any and all other users to release and waive all claims against Paddleboy® for damages or injury which may result from the use of this product.**

## WARRANTY

Seattle Sports will repair or replace (at its discretion) any broken or defective parts for one year from date of purchase. The customer will be responsible for the cost of shipping the Paddleboy® back to the factory. Seattle Sports will pay all return shipping costs to customer.

The customer takes responsibility for the proper attachment and use of the Paddleboy®. Seattle Sports cannot be responsible for any damage to any property arising out of the use or misuse of its product. Call first for return authorization: 800 632 6163. Return to Seattle Sports Co. 1300 N. Mariposa Ranch Rd., Nogales, AZ. 85621

seattlesportscos.com



## QUICK RELEASE WHEELS



locate push-button



press down to clear wheel hub



push axle through



When attaching to axle, rotate wheel slowly until tab settles and wheel sits snug (the push-button should be popped out)