

Original End Cart

BOAT CART ASSEMBLY



STEP 1

Unfold the Original End Cart and place at an end of your craft. Use snap buttons to adjust the support arms to the second “click stop” from the top. Some of the snap button settings are behind the protective end caps. They can be located under the soft vinyl cap by pushing the button in and pulling up the support arm. Repeat on other arm.

STEP 2

Slide the Original End Cart over either end of your craft. If the craft is too deep and the cart will not slide all the way on, remove and set the arms one “stop” higher. The top crossbar should be resting on the gunwales or deck, and the hull should be centered and resting on the padded, bottom crossbar.

IMPORTANT

Use the shortest snap button setting possible.

STEP 3


With the Original End Cart arms resting against the craft’s hull, adjust the relaxed shock cord so that the attachment hook is about 2/3 of the way to the attachment point. Stretch out the shock cord and hook securely on the thwart, seat, or some other secure part of the craft.

NEVER stretch the shock cord more than two times its relaxed length.

ALWAYS grip the shock cord and attachment hook firmly, keeping your face away from cord and hook while stretching.



Folds up for easy storage.

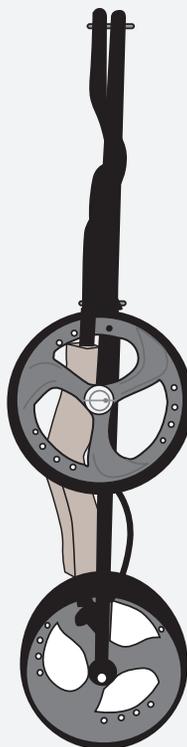

CAUTION

Never tow a boat on this cart behind any power vehicle. Do not carry passengers in the boat while the cart is in use.

WARNING

Due to the fact that Seattle Sports does not have control over how this boat cart is used or how it is attached to a boat, Seattle Sports disclaims any and all liability for damage or injury that might occur as a result of the improper use of this product.

WARRANTY

Seattle Sports products are guaranteed for materials and workmanship for one year. Normal wear and tear or damage from misuse, accident, or alterations are not covered. Use of this product in a professional setting is not covered. Seattle Sports assume no liability for incidental damages or injuries resulting from the use or misuse of this product. Thank you for purchasing our products. Please contact us with any questions or concerns about our products. Seattle Sports Company, 3217 W. Smith St #1, Seattle, WA 98199. Made in China. © 2017 Seattle Sports Co. contact@seattlesportsco.com